


# Special Projects Category C

## Affordable Housing Location Criteria

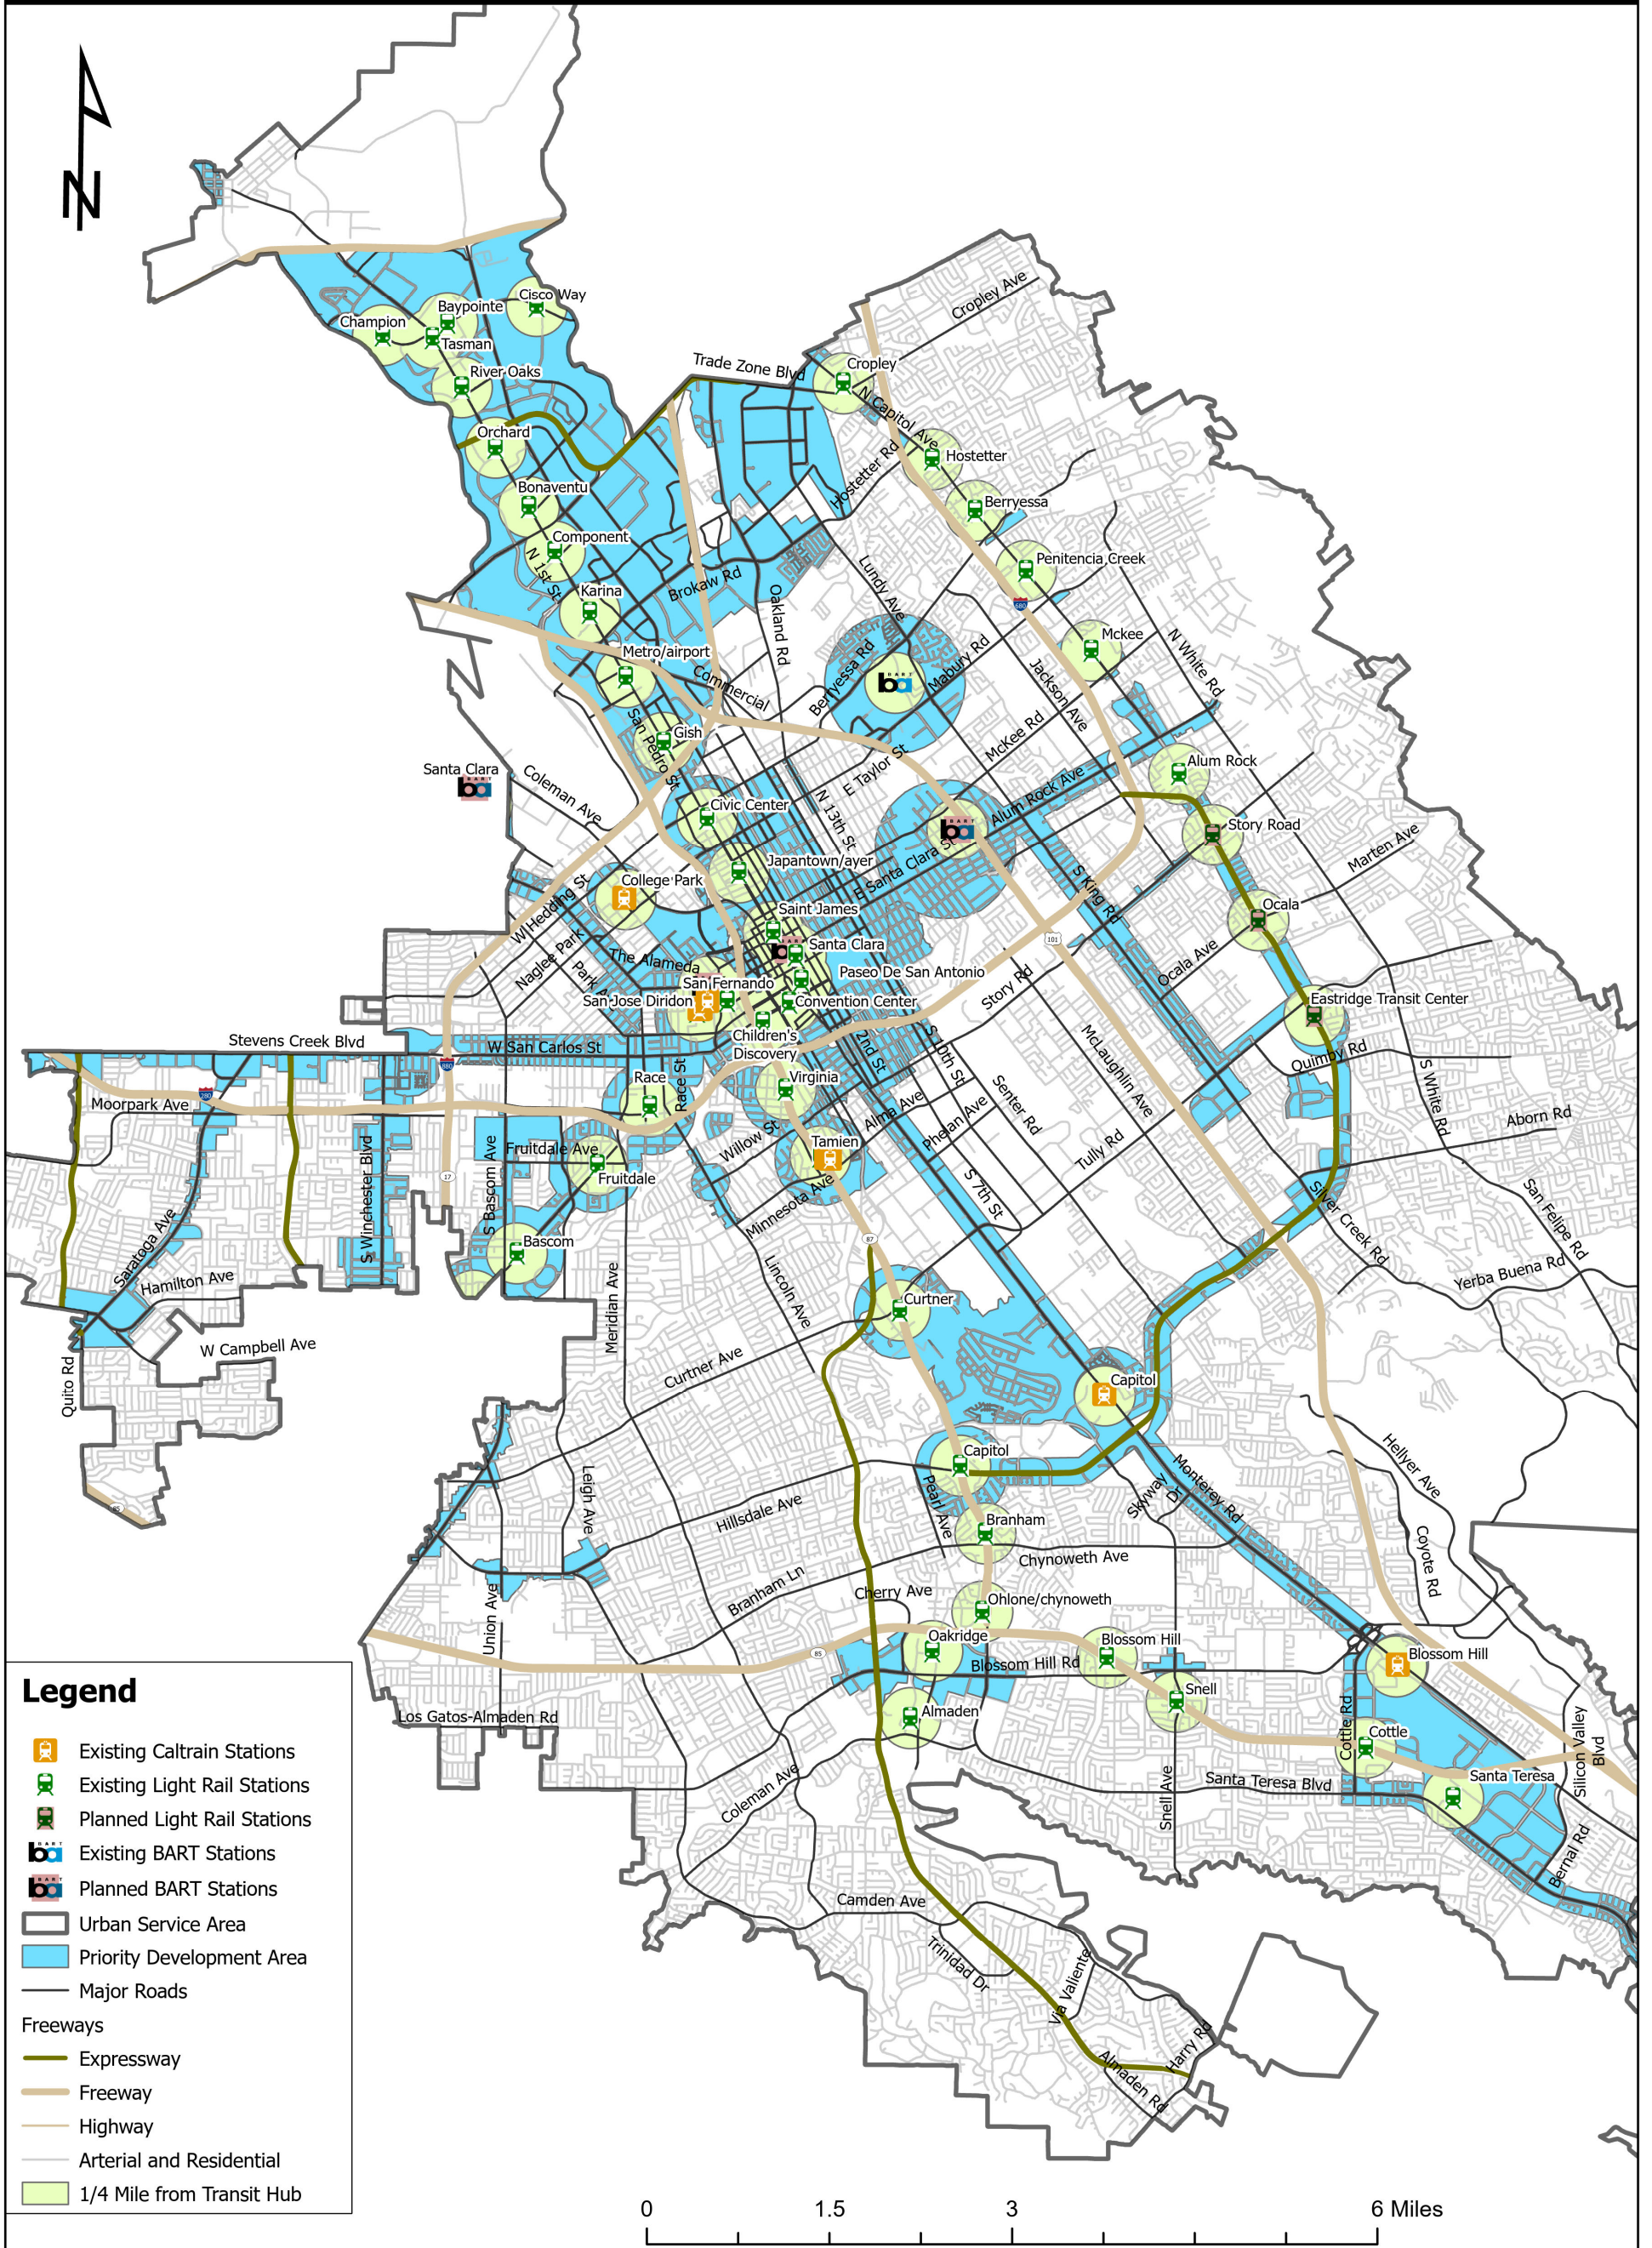

**Map Notes:** This map is for screening of location criteria only. Special Projects are smart growth (e.g., small urban infill, high density) and affordable housing projects that can receive LID treatment reduction credits and use specific types of non-LID stormwater treatment measures.

A Priority Development Area (PDA) is an infill development area formally designated by the ABAG/MTC's FOCUS regional planning program. PDAs do not consistently align with 1/4 mile buffers.

Data Sources: ABAG, City of San Jose, VTA