


PLAN

- NOTE:
1. DRILL & EPOXY DOWEL INTO EX. P.C.C. & GREASE OTHER END TO SET INTO NEW CONCRETE.
 2. APPLY GREASE TO REBAR END AT NEW WALK ONLY.

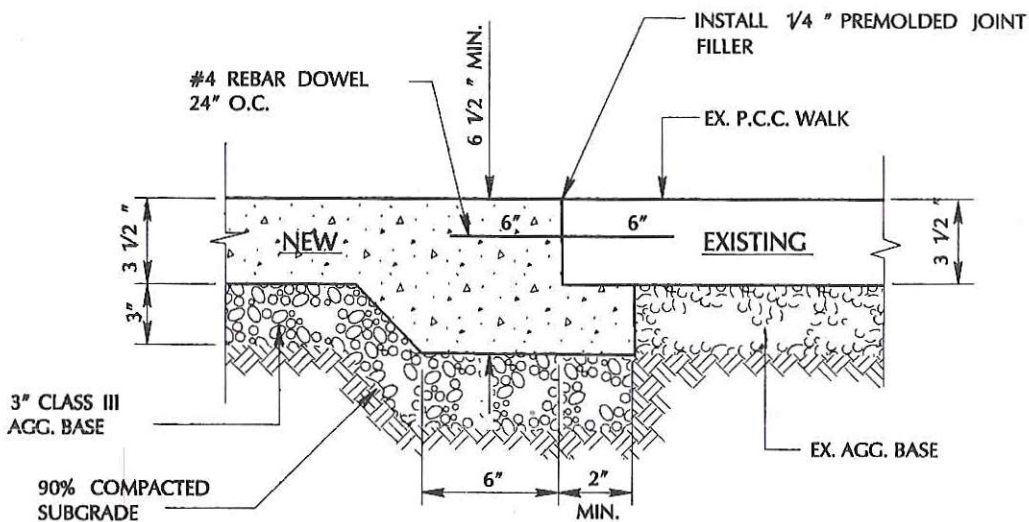

SECTION A-A

APPROVED BY

[Signature]

DATE

4/3/92

**P.C.C. WALKWAY NEW WALK
TO EXISTING CONNECTION
(TYPICAL)**

DEPARTMENT OF PUBLIC WORKS



DRAWING
NO.

L-12