


- NOTES:**
1. ANODE MAY BE INSTALLED HORIZONTALLY BELOW THE SPRINGLINE OF THE PIPE OR VERTICALLY WITH 2'-0" MIN. COVER.
  2. PLACE BACKFILL TO 6" ABOVE ANODE FREE OF LUMPS OR STONES AND FLOOD WITH WATER.
  3. LEAVE ENOUGH SLACK IN CABLE TO PREVENT DAMAGE DURING BACKFILL OPERATIONS.
  4. ENCASE ALL METAL PIPE WITH MIN. 8 MIL POLYETHYLENE WRAP PER AWWA C105.
  5. INSTALL ANODE NOT LESS THAN 3'-0" NOR MORE THAN 5'-0" FROM PIPE WALL.

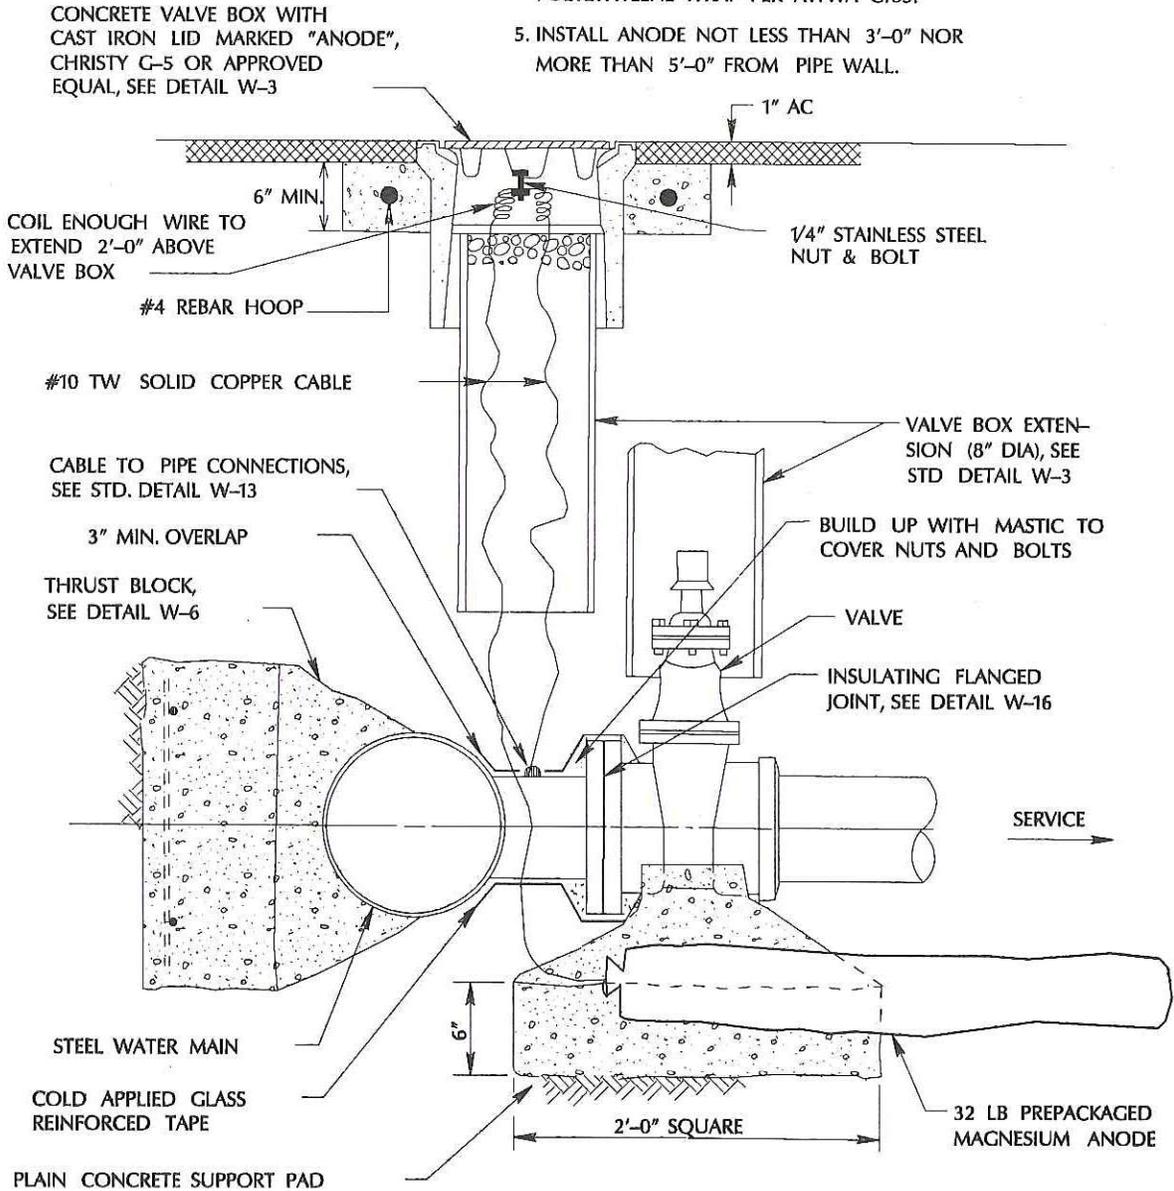

APPROVED BY


*W-15*

DATE

*4-2-73*

## INSULATED OUTLET

DEPARTMENT OF PUBLIC WORKS

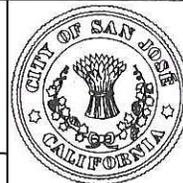

DRAWING NO.

W-15